







Underlayment BLEND with Nike Grind


INSTALLATION PROCESS FOR NON GLUED FLOORS

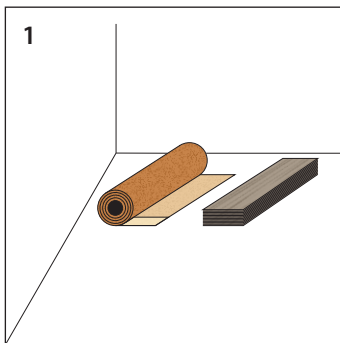



These are all the materials needed to install the underlayment.

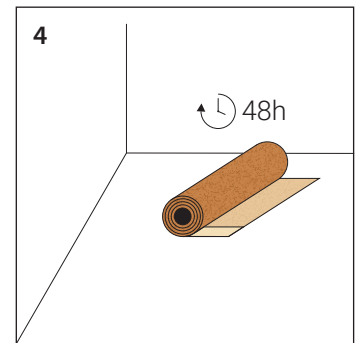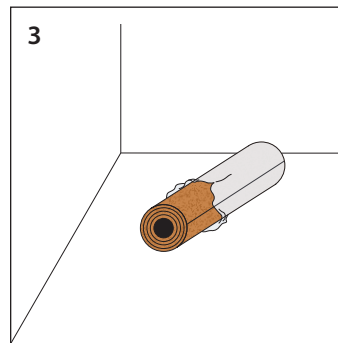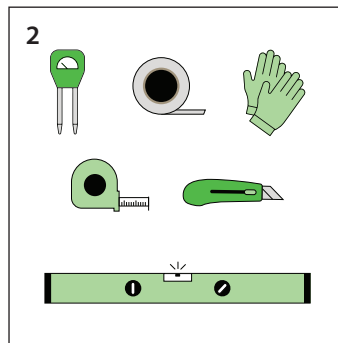


For the installation process, open the packaging 48 hours in advance and leave for acclimatization.

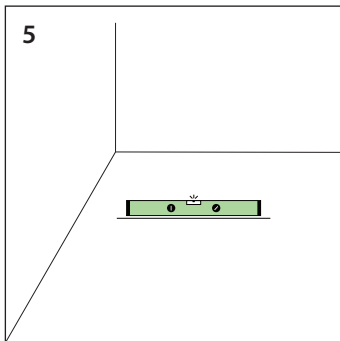


Subfloor preparation: Make sure that the subfloor is leveled, dry, clean and in good structural conditions.

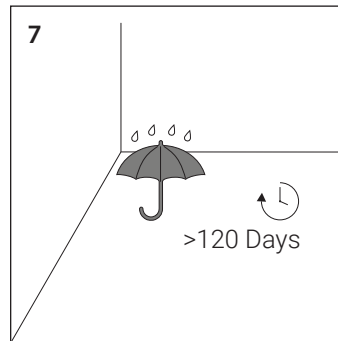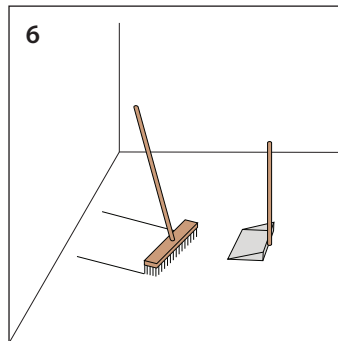


New concrete slabs must be left to cure for 120 days before installation.

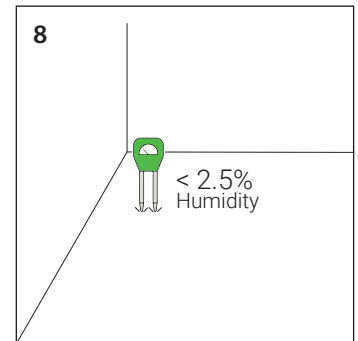


The humidity content of the substrate is critical: it must not exceed 2.5 % (MC).

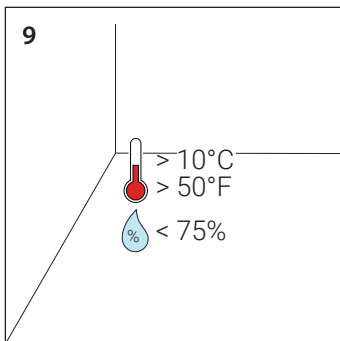


Air temperature should be above 10°C and air humidity below 75%.

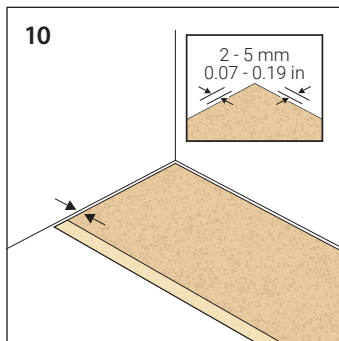


The underlayment should be installed in a perpendicular direction to the final floor. Leave a little space between the wall and the underlayment.

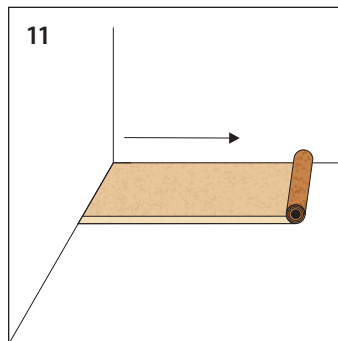


Place one roll parallel to the wall with the vapor barrier face up on the subfloor. The foil overlap should be on the opposite side of the wall.

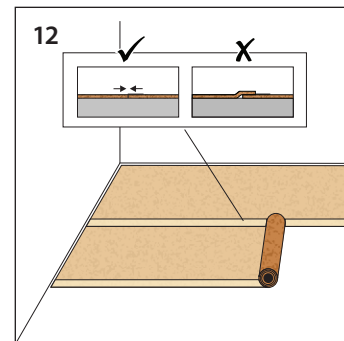


Install the new row immediately next to the previous one, covering the foil overlap. Be sure not to overlap the underlayment edges nor leave any gaps.

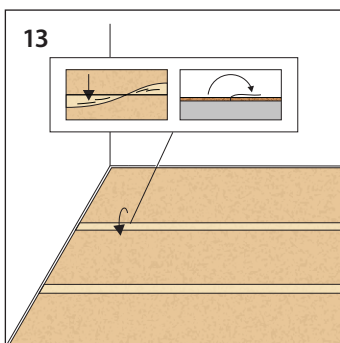


Make sure the foil overlap the row parallel.

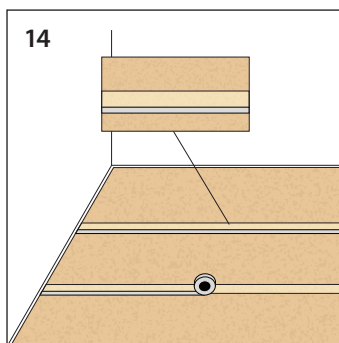


Use a sealing tape to seal the rows securely together.

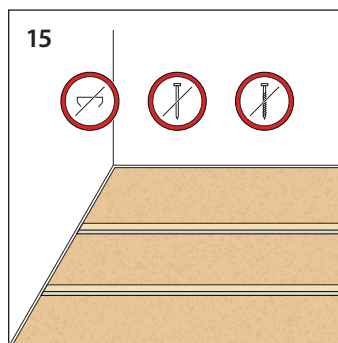


Never mechanically secure the underlayment with screws, nails or staples, since this may undermine its effectiveness.

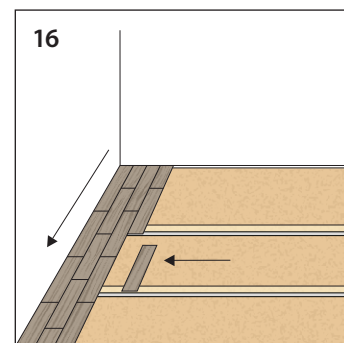

Install the flooring in a perpendicular direction to the underlayment.

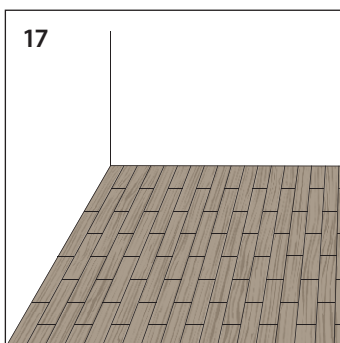

Always follow the flooring manufacturer's recommended installation instructions.

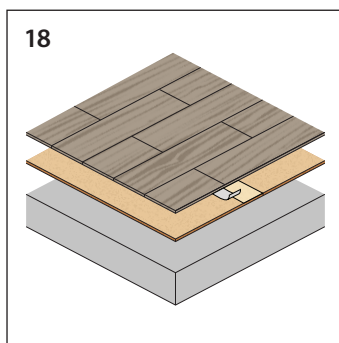

Total System.



**ACCESS HERE,
FOR MORE
INFORMATION
ABOUT
INSTALLATION
PROCESS**